

# BMW 6 Series installation instructions

(Fit for 2009-2018 BMW 6 Series F06/F12)

Attention: Step 11-15 is for CIC system only. NBT system is not necessary.



1. Original dashboard.



2. Loosen the right AC outlet.



3. Loosen the left AC outlet.



4. Remove the A/C outlet.




5. Remove the plastic cover under the A/C button panel.



6. Remove the four screws of front panel.



7. Remove the front panel.

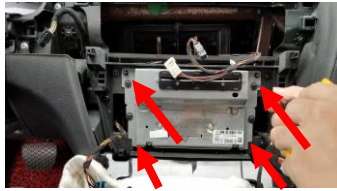


8. Remove the four screws of CD unit.




9. Remove the two screws of screen.



10. Remove the original screen.

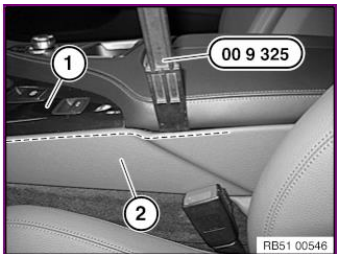


11. Take apart the right side of armrest box.

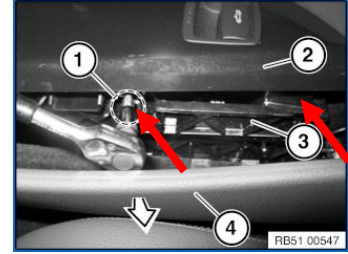


12. Loosen the two screws.



13. Remove the gear panel.

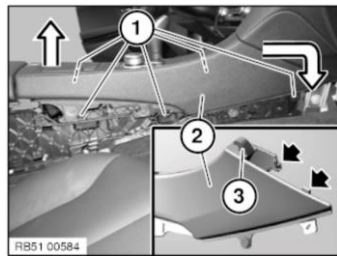

14. Take out the iDrive knob.

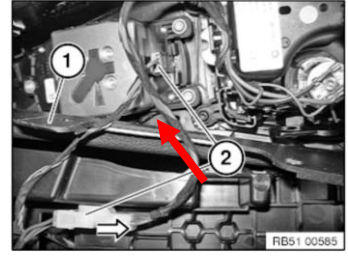

15. Connect the iDrive to adapter plugs of our harness.



16. Connect the adapters of new harness.



17. Mount the screen.



18. Start the car and test.

CIC