

Installation Guide for X3/X4 F25/F26 CIC NBT 2011-2017)



1. Original Monitor
(Power off before installation).



2. Pry and remove the trim panel of the air-conditioning.



3. Pry loose and take out the trim panel of CD player




4. Remove fixed screws of the panel.



5. Remove fixed screws of the original HOST



6. Remove three fixed screws of the original monitor.

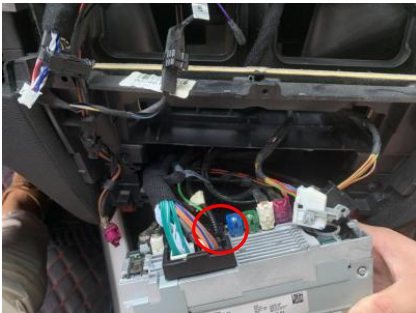

7. Pull out the original power harness and optical fiber, then plug it with Android power harness.



8. Pull up the frame, the buckle will come loose and push down it. Then The frame will be dismantled.



9. Put the cables all through the frame, and Fix well the frame on the original car.



10. Restore all of them well. And the last step is that Assemble Android screen well to the frame and buckle up from top to bottom.



11. Effect picture after installation.